



1455 Westec Dr. ♦ P. O. Box 25755 ♦ Eugene, Oregon 97402  
Website: [www.internationaldoor.com](http://www.internationaldoor.com) ♦ e-mail: [info@internationaldoor.com](mailto:info@internationaldoor.com)

## **Instructions to Mull Door & Sidelights Together**

*Before you install the Door System, all parts must be weatherized. Unscrew and remove the sweeps, and remove the weatherstripping from the kerfs of the jambs and astragal. Please refer to our Finishing Recommendations in the IDL Care and Maintenance Brochure.*

1. Remove Door from frame and remove the weatherstripping.
2. Lay frame down with the outside facing up.
3. Lay sidelight(s) down next to frame with outside facing up. Be sure the configuration is correct.
4. If applicable, slide on sill extender.
5. Flush the edges of the frames and clamp together – being careful to protect surfaces.
6. Drill holes through the frame into the sidelight, placing holes where the weatherstrip will cover. Use a  $\frac{7}{64}$ " drill bit in at least six places evenly spaced along each jamb.
7. Using the holes drilled through the frame, screw the door frame to each sidelight frame using 1  $\frac{1}{4}$ " drywall screws.
8. For a more durable assembly you can use an exterior grade wood glue between the jamb sides before screwing together.
9. You can staple the door and sidelight joints – front and back – as the mull caps will cover these seams.
10. Install the unit in opening.
11. Reinstall door into frame and reinstall weatherstripping.
12. Trim with appropriate mull cap covers, brickmold and casing if applicable.



1455 Westec Dr. ♦ P. O. Box 25755 ♦ Eugene, Oregon 97402  
Website: [www.internationaldoor.com](http://www.internationaldoor.com) ♦ e-mail: [info@internationaldoor.com](mailto:info@internationaldoor.com)

## **Instructions to Install Double Doors**

*Before you install the Door System, all parts must be weatherized. Unscrew and remove the sweeps, and remove the weatherstripping from the kerfs of the jambs and astragal. Please refer to our Finishing Recommendations in the IDL Care and Maintenance Brochure.*

When you order a pre-hung double door from *International Door and Latch*, we pre-hang and assemble your door unit in our shop to make sure everything matches, fits, and works. For shipping purposes, we take the unit apart, package and crate all parts.

### **Upon receiving the shipment, you will find the following parts:**

- Two doors (one of the doors with an astragal and flush bolts)
- Two jamb legs with hinges. (If the door is pre-finished the hinges will be in the parts bag.)
- One jamb head
- One sill ( aluminum sills for jambs 6 <sup>9</sup>/<sub>16</sub>" and larger will also have a sill extender)
- Three pieces of brickmold
- Three pieces of casing (if applicable)
- One bag of screws (and hinges if the door is pre-finished)
- Two door sweeps (installed on the bottom of each door)
- Weatherstrip will be installed in the jambs, head and astragal

### **Assembly Instructions:**

1. Once doors, jambs, and brickmold are finished, you can reassemble the unit.
2. Press the weatherstripping into the kerfs of the jambs and astragal.
3. Lay the jamb legs, jamb head, and sill on the floor or assembly table, with the exterior edge facing up, to form a rectangle. If the sill requires a sill extender, install now.
4. Use the 2 ½" screws provided, fasten the jamb head and sill to the jamb legs, utilizing the predrilled holes.
5. Use the 1" screws provided to fasten the sill (and sill extension, if applicable) to the bottom of the jamb legs, using the pre-drilled holes
6. Install the jamb frame in the opening.
7. Use the hinges provided to install the doors into the jamb frame.
8. Install the brickmold and/or casing as necessary.